

## Seasonal Inspection Checklist for Howe Ice Flaker

1. Verify correct suction pressure
  - a. Suction pressure will increase / decrease as the weather changes
  - b. Adjust EPR as needed
  
2. Check water filter(s) if applicable
  - a. Clogged waters will restrict water pressure to the flaker
  - b. Be sure water pressure always falls within the required rating (ServiceManual)
  
3. Verify that bearings have been greased
  - a. Upper and lower bearings should be greased every 6 months – minimum
  - b. Failure to grease bearings can lead to premature failure
  
4. Confirm that sight glass is full and has a green indicator
  - a. This can identify a possible leak / undercharge
  
5. Clean and sanitize evaporator
  - a. Prevents scale from forming on evaporator, which can affect ice formation / harvesting on freezing surface